



Changes for the Better

GT1020-LBD/LBD2/LBL

GT10 General Description

Manual Number	JY997D22901B
Date	November 2006



GRAPHIC OPERATION TERMINAL
GOT1000

This manual describes the specifications of the product. Before use, read this manual and manuals of relevant products fully to acquire proficiency in handling and operating the product. Make sure to learn all the product information, safety information, and precautions.
 And, store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.
 Registration
 The company name and the product name to be described in this manual are the registered trademarks or trademarks of each company.
 Effective November 2006
 Specifications are subject to change without notice.
 © 2006 Mitsubishi Electric Corporation

Safety Precaution (Read these precautions before using.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product. In this manual, the safety precautions are ranked as "DANGER" and "CAUTION".

	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
	Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Depending on circumstances, procedures indicated by "CAUTION" may also be linked to serious results.
 In any case, it is important to follow the directions for usage.

DESIGN PRECAUTIONS

- Some failures of the GOT or cable may keep the outputs on or off. An external monitoring circuit should be provided to check for output signals which may lead to a serious accident.
 Not doing so can cause an accident due to false output or malfunction.
- If a communication fault (including cable disconnection) occurs during monitoring on the GOT, communication between the GOT and PLC CPU is suspended and the GOT becomes inoperative.
 A system where the GOT is used should be configured to perform any significant operation to the system by using the switches of a device other than the GOT on the assumption that a GOT communication fault will occur. Not doing so can cause an accident due to false output or malfunction.
- Do not use the GOT as the warning device that may cause a serious accident.
 An independent and redundant hardware or mechanical interlock is required to configure the device that displays and outputs serious warning.
 Failure to observe this instruction may result in an accident due to incorrect output or malfunction.
- Incorrect operation of the touch switch(s) may lead to a serious accident if the GOT backlight is gone out.
 When the GOT backlight goes out, causes the monitor screen to appear blank, while the input of the touch switch(s) remains active.
 This may confuse an operator in thinking that the GOT is in "screensaver" mode, who then tries to release the GOT from this mode by touching the display section, which may cause a touch switch to operate.

DESIGN PRECAUTIONS

- Do not bundle the control and communication cables with main-circuit, power or other wiring.
 Run the above cables separately from such wiring and keep them a minimum of 100mm (3.94in.) apart. Not doing so noise can cause a malfunction.

MOUNTING PRECAUTIONS

- Be sure to shut off all phases of the external power supply used by the system before mounting or removing the GOT to/from the panel.
 Not doing so can cause the unit to fail or malfunction.

MOUNTING PRECAUTIONS

- Use the GOT in the environment that satisfies the general specifications described in this manual. Not doing so can cause an electric shock, fire, malfunction or product damage or deterioration.
- When mounting the GOT to the control panel, tighten the mounting screws in the specified torque range. Undertightening can cause the GOT to drop, short circuit or malfunction. Overtightening can cause a drop, short circuit or malfunction due to the damage of the screws or the GOT.

WIRING PRECAUTIONS

- Be sure to shut off all phases of the external power supply used by the system before wiring. Failure to do so may result in an electric shock, product damage or malfunctions.
- Please make sure to ground FG terminal of the GOT power supply section by applying 100 or less which is used exclusively for the GOT. Not doing so may cause an electric shock or malfunction.
- Correctly wire the GOT power supply section after confirming the rated voltage and terminal arrangement of the product. Not doing so can cause a fire or failure.
- Tighten the terminal screws of the GOT power supply section in the specified torque range. Undertightening can cause a short circuit or malfunction. Overtightening can cause a short circuit or malfunction due to the damage of the screws or the GOT.
- Exercise care to avoid foreign matter such as chips and wire offcuts entering the GOT. Not doing so can cause a fire, failure or malfunction.

WIRING PRECAUTIONS

- Plug the communication cable into the connector of the connected unit and tighten the mounting and terminal screws in the specified torque range.
 Undertightening can cause a short circuit or malfunction. Overtightening can cause a short circuit or malfunction due to the damage of the screws or unit.

TEST OPERATION PRECAUTIONS

- Before performing the test operations of the user creation monitor screen (such as turning ON or OFF bit device, changing the word device current value, changing the settings or current values of the timer or counter), read through the manual carefully and make yourself familiar with the operation method.
 During test operation, never change the data of the devices which are used to perform significant operation for the system. False output or malfunction can cause an accident.

STARTUP/MAINTENANCE PRECAUTIONS

- When power is on, do not touch the terminals.
 Doing so can cause an electric shock or malfunction.
- Before starting cleaning or terminal screw retightening, always switch off the power externally in all phases. Not switching the power off in all phases can cause a unit failure or malfunction. Undertightening can cause a short circuit or malfunction. Overtightening can cause a short circuit or malfunction due to the damage of the screws or unit.

STARTUP/MAINTENANCE PRECAUTIONS

- Do not disassemble or modify the unit.
 Doing so can cause a failure, malfunction, injury or fire.
- Do not touch the conductive and electronic parts of the unit directly.
 Doing so can cause a unit malfunction or failure.
- The cables connected to the unit must be run in ducts or clamped.
 Not doing so can cause the unit or cable to be damaged due to the dangling, motion or accidental pulling of the cables or can cause a malfunction due to a cable connection fault.
- When unplugging the cable connected to the unit, do not hold and pull the cable portion. Doing so can cause the unit or cable to be damaged or can cause a malfunction due to a cable connection fault.
- Before touching the unit, always touch grounded metal, etc. to discharge static electricity from human body, etc.
 Not doing so can cause the unit to fail malfunction.

DISPOSAL PRECAUTIONS

- When disposing of the product, handle it as industrial waste.

TRANSPORTATION PRECAUTIONS

- Make sure to transport the GOT main unit and/or relevant unit(s) in the manner they will not be exposed to the impact exceeding the impact resistance described in the general specifications of this manual, as they are precision devices. Failure to do so may cause the unit to fail.
 Check if the unit operates correctly after transportation.

Compliance with EC directive (CE Marking)

This note does not guarantee that an entire mechanical module produced in accordance with the contents of this note will comply with the following standards. Compliance to EMC directive for the entire mechanical module should be checked by the user / manufacturer. For more details please contact the local Mitsubishi Electric sales site.

Requirement for Compliance with EMC directive

The following products have shown compliance through direct testing (to the identified standards) and design analysis (forming a technical construction file) to the European Directive for Electromagnetic Compatibility (89/336/EEC) when used as directed by the appropriate documentation.

Type :Programmable Controller (Open Type Equipment)

Standard		Remark
EN61131-2 : 2003	EMI	Compliance with all relevant aspects of the standard. (Radiated Emissions)
Programmable controllers- Equipment, requirement and tests	EMS	Compliance with all relevant aspects of the standard. (ESD, RF electromagnetic field, EFTB, Surge, RF conducted disturbances and Power frequency magnetic field)

For more details please contact the local Mitsubishi Electric sales site.

Notes for compliance to EMC regulation

- General notes on the use of communication cables
 Any device which utilizes a data communication function is susceptible to the wider effects of local EMC noise. Therefore, when installing any communication cables care should always be taken with the routing and location of those cables. The GOT units identified on the previous chapter are compliant with the EMC requirement when the following communication cables are used.

GOT Unit	Existing Cables
GT1020-LBD, GT1020-LBL	GT10-C30R4-8P (For Melsec FX series PLC)
GT1020-LBD2	GT10-C30R2-6P (For Melsec Q series PLC)

- General notes on the use of the power cable
 The GT1020-LBD and GT1020-LBD2 unit demand that the cable for the power supply is 10m or less.

Associated Manuals

The following manuals are relevant to this product. When these loose manuals are required, please consult with our local distributor.

Manual name	Contents	Manual Number (Model Code)
GT10 User's Manual (sold separately) *1	Describes the GT10 hardware-relevant content such as part names, external dimensions, mounting, power supply wiring, specifications, and introduction to option devices	JY997D24701 (09R819)
GOT1000 Series Connection Manual 1/3, 2/3, 3/3 (sold separately) *1	Describes system configurations of the connection method applicable to GOT1000 series and cable creation method	SH-080532ENG (1D7M26)
GT Designer2 Version2 Basic Operation/Data Transfer Manual (For GOT1000 Series) (sold separately) *1	Describes methods of the GT Designer2 installation operation, basic operation for drawing and transmitting data to GOT1000 series	SH-080529ENG (1D7M24)
GT Designer2 Version2 Screen Design Manual (For GOT1000 Series) 1/3, 2/3, 3/3 (sold separately) *1	Describes specifications and settings of the object functions used in GT Designer2	SH-080530ENG SH-080531ENG (1D7M25)

*1 Stored in the GT Works 2/GT Designer2 in PDF format.

For details of a PLC to be connected, refer to the PLC user's manual respectively.

Bundled Items

Product Name	Model Name	Specifications	
GOT	GT1020-LBD	3.7" diagonal [160 × 64 dots], STN monochrome LCD (black/white), built-in backlight	
	GT1020-LBD2		
	GT1020-LBL		
Bundled item	Quantity	Bundled item	Quantity
PLC Communication Connector	1	Panel Mounting Packing	1
Panel Mounting Bracket (with M4 × 20 screws)	4	GT10 General Description (This manual)	1

1. Specifications

1.1 General Specifications

Item		Specifications				
		GT1020-LBD	GT1020-LBD2	GT1020-LBL		
Operating ambient temperature	Display section	0 to 50°C				
	Other than display section	0 to 55°C (When mounted horizontally), 0 to 50°C (When mounted vertically)				
Storage ambient temperature		-20 to 60°C				
Operating ambient humidity		10 to 90% RH, non-condensing (The wet bulb temperature is 39°C or less.)				
Storage ambient humidity		10 to 90% RH, non-condensing (The wet bulb temperature is 39°C or less.)				
Vibration resistance	Conforms to JIS B3502 and IEC61131-2	Under intermittent vibration	Frequency	Acceleration	Half-amplitude	Sweep Count 10 times each in X, Y and Z directions
			5 to 9Hz	--	3.5mm	
		Under continuous vibration	5 to 9Hz	--	1.75mm	
			9 to 150Hz	4.9m/s ²	--	
Shock resistance		Conforms to JIS B3502, IEC 61131-2 (147m/s ² , 11 ms, Sine half-wave pulse, 3 times each in the X, Y, and Z directions.)				
Operating atmosphere		Must be free of lamp black, corrosive gas, flammable gas, or excessive amount of electroconductive dust particles.				
Operating altitude ¹		2000 m (6562 ft) max.				
Installation location		Inside control panel				
Overvoltage category ²		II or less				
Pollution degree ³		2 or less				
Cooling method		Self-cooling				

*1 Do not use or store the GOT under pressure higher than the atmospheric pressure of altitude 0m (0ft.). Failure to observe this instruction may cause a malfunction.

*2 This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within the premises.
Category II applies to equipment for which electrical power is supplied from fixed facilities.
The surge voltage withstand level for up to the rated voltage of 300 V is 2500 V.

*3 This index indicates the degree to which conductive material is generated in the environment where the equipment is used.
In pollution degree 2, only non-conductive pollution occurs but temporary conductivity may be produced due to condensation.

1.2 Performance Specifications

Item		Specifications		
		GT1020-LBD	GT1020-LBD2	GT1020-LBL
Display section ¹	Type	STN monochrome (white/black) liquid crystal		
	Screen size	3.7"		
	Resolution	160 × 64 dots (Horizontal format)		
	Display size	W86.4(3.4) × H34.5(1.35) [mm](inch) (Horizontal format)		
	Display character	16-dot standard font: 20 characters × 4 lines (Horizontal format)		
	Display color	Monochrome (white/black)		
	Display angle	Left/Right: 30 degrees, Top: 20 degrees, Bottom: 30 degrees (Horizontal format)		
	Contrast adjustment	16-level adjustment		
	Intensity of LCD only	200 [cd/m ²] (in green)		
Life ²	Approx. 50,000h. Guaranteed: 1 year (Time for display intensity to become 1/5 at operating ambient temperature of 25°C)			
Backlight	LED with 3 available colors (green, red, orange) (no replacement required) Backlight status (colors, ON/BLINK/OFF) control, Adjustable screensaver activation time Setting the system information enables ³ PLC to control the backlight status.			
Touch panel	Number of touch keys	Maximum 50 keys/screen (Analog resistive film touch panel)		
	Key size	Minimum 2 × 2 dots (per key)		
	Simultaneous pressing of two (or more) areas (2-point press)	Not supported (Simultaneous pressing of two or more areas on the screen may activate the switch between those areas.)		
	Life	1 million times or more (operating force 0.98N max.)		
Memory	User memory ⁴	Flash memory ROM (Internal), for storing Project data (512kbytes or less), OS, Alarm history and Recipe data		
	Life (Number of write times)	100,000 times		
Buzzer output (a buzzer that sounds when touch keys are pressed)		Single tone (LONG/ SHORT/ OFF adjustable)		
Environmental protective structure ⁵		Equivalent to IP67 (JEM1030) (front section)		
External dimensions		W113(4.44) × H74(2.91) × D27(1.06)[mm](inch) (Horizontal format)		

Item	Specifications		
	GT1020-LBD	GT1020-LBD2	GT1020-LBL
Panel cutting dimensions	W105 (4.13) (+1, -0) × H66 (2.59) (+1, -0) [mm] (inch) (Horizontal format)		
Weight	0.2kg (Excluding mounting fixtures)		about 0.18kg (Excluding mounting fixtures)
Built-in interface	PLC communication	Conforming to serial RS-422 standard, 1ch Transmission speed: 115,200/57,600/ 38,400/19,200/ 9,600/4,800bps Connector shape : Connector terminal block 9-pins Application : PLC communication	Conforming to serial RS-232 standard, 1ch Transmission speed: 115,200/57,600/ 38,400/19,200/ 9,600/4,800bps Connector shape : Connector terminal block 9-pins Application : PLC communication
	PC communication	Conforming to serial RS-232 standard, 1ch Transmission speed : 115,200/57,600/38,400/19,200/9,600/4,800bps Connector shape : MINI DIN 6-pins (Female) Application : PC communication (Project data upload/download, OS installation, Transparent function)	
Compatible software package	GT Designer2 Version2.43V or later		

*1 Bright dots (always lit) and dark dots (unlit) may appear on a liquid crystal display panel. It is impossible to completely avoid this symptom, as the liquid crystal display comprises of a great number of display elements. Flickers may be observed depending on the display color.
Please note that these dots appear due to its characteristic and are not caused by product defect.

*2 The GOT screen saving function prevents images from becoming permanently etched on the display screen.

*3 For the details of system information, refer to the following.

☞ GT Designer2 Version☐ Screen Designer Manual

*4 ROM in which new data can be written without deleting the written data.

*5 Note that this does not guarantee all users' operation environment.

1.3 Power Supply Specifications

(For details on power supply wiring, such as the allowable cable size and tightening torque, refer to the additional manual, "GT10 User's Manual".)

Item		Specifications		
		GT1020-LBD	GT1020-LBD2	GT1020-LBL
Input power supply voltage	24VDC (+10% -15%), ripple voltage 200mV or less	5VDC (±5%), supplied from the PLC		
Fuse (built-in, not exchangeable)	0.4A	-		
Power consumption	1.9W (80mA/24VDC) or less	1.1W (220mA/5VDC) or less		
	At backlight off	1.2W (50mA/24VDC) or less	0.6W (120mA/5VDC) or less	
Inrush current	13A or less (26.4VDC) 1ms	-		
Permissible instantaneous power failure time ¹	Within 5ms	-		
Noise immunity	Noise voltage: 1000Vp-p, Noise width: 1μs (by noise simulator of 30 to 100Hz noise frequency)			
Dielectric withstand voltage	500VAC for 1 minute (between the GOT's power supply terminals and the GOT's grounding terminal)	-		
Insulation resistance	10MΩ or larger by insulation resistance tester (between the GOT's power supply terminals and the GOT's grounding terminal)	-		
Grounding	Class D grounding (100Ω or less). To be connected to the panel when grounding is not possible			

*1 The GOT continues to operate even upon 5ms or shorter instantaneous power failure.
The GOT stops operating if there is extended power failure or voltage drop, while it automatically resumes operation as soon as the power is restored.

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

Warranty

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.
- This product has been manufactured under strict quality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

 **MITSUBISHI ELECTRIC CORPORATION**

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

HIMEJI WORKS : 840, CHIYODA CHO, HIMEJI, JAPAN

MITSUBISHI *Changes for the Better*

GT1020-LBD/LBD2/LBL

GT10 General Description

Manual Number	JY997D22901B
Date	November 2006

This manual describes the specifications of the product. Before use, read this manual and manuals of relevant products fully to acquire proficiency in handling and operating the product. Make sure to learn all the product information, safety information, and precautions.

And, store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

Registration
The company name and the product name to be described in this manual are the registered trademarks or trademarks of each company.

Effective November 2006
Specifications are subject to change without notice.

© 2006 Mitsubishi Electric Corporation

Safety Precaution (Read these precautions before using.)
Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.
The precautions given in this manual are concerned with this product.
In this manual, the safety precautions are ranked as "DANGER" and "CAUTION".

DANGER	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
CAUTION	Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Depending on circumstances, procedures indicated by "CAUTION" may also be linked to serious results.
In any case, it is important to follow the directions for usage.

DESIGN PRECAUTIONS **DANGER**

- Some failures of the GOT or cable may keep the outputs on or off. An external monitoring circuit should be provided to check for output signals which may lead to a serious accident. Not doing so can cause an accident due to false output or malfunction.
- If a communication fault (including cable disconnection) occurs during monitoring on the GOT, communication between the GOT and PLC CPU is suspended and the GOT becomes inoperative. A system where the GOT is used should be configured to perform any significant operation to the system by using the switches of a device other than the GOT on the assumption that a GOT communication fault will occur. Not doing so can cause an accident due to false output or malfunction.
- Do not use the GOT as the warning device that may cause a serious accident. An independent and redundant hardware or mechanical interlock is required to configure the device that displays and outputs serious warning. Failure to observe this instruction may result in an accident due to incorrect output or malfunction.
- Incorrect operation of the touch switch(s) may lead to a serious accident if the GOT backlight is gone out. When the GOT backlight goes out, causes the monitor screen to appear blank, while the input of the touch switch(s) remains active. This may confuse an operator in thinking that the GOT is in "screensaver" mode, who then tries to release the GOT from this mode by touching the display section, which may cause a touch switch to operate.

DESIGN PRECAUTIONS **CAUTION**

- Do not bundle the control and communication cables with main-circuit, power or other wiring. Run the above cables separately from such wiring and keep them a minimum of 100mm (3.94in.) apart. Not doing so noise can cause a malfunction.

MOUNTING PRECAUTIONS **DANGER**

- Be sure to shut off all phases of the external power supply used by the system before mounting or removing the GOT to/from the panel. Not doing so can cause the unit to fail or malfunction.

MOUNTING PRECAUTIONS **CAUTION**

- Use the GOT in the environment that satisfies the general specifications described in this manual. Not doing so can cause an electric shock, fire, malfunction or product damage or deterioration.
- When mounting the GOT to the control panel, tighten the mounting screws in the specified torque range. Undertightening can cause the GOT to drop, short circuit or malfunction. Overtightening can cause a drop, short circuit or malfunction due to the damage of the screws or the GOT.

WIRING PRECAUTIONS **DANGER**

- Be sure to shut off all phases of the external power supply used by the system before wiring. Failure to do so may result in an electric shock, product damage or malfunctions.
- Please make sure to ground FG terminal of the GOT power supply section by applying 100 or less which is used exclusively for the GOT. Not doing so may cause an electric shock or malfunction.
- Correctly wire the GOT power supply section after confirming the rated voltage and terminal arrangement of the product. Not doing so can cause a fire or failure.
- Tighten the terminal screws of the GOT power supply section in the specified torque range. Undertightening can cause a short circuit or malfunction. Overtightening can cause a short circuit or malfunction due to the damage of the screws or the GOT.
- Exercise care to avoid foreign matter such as chips and wire offcuts entering the GOT. Not doing so can cause a fire, failure or malfunction.

WIRING PRECAUTIONS **CAUTION**

- Plug the communication cable into the connector of the connected unit and tighten the mounting and terminal screws in the specified torque range. Undertightening can cause a short circuit or malfunction. Overtightening can cause a short circuit or malfunction due to the damage of the screws or unit.

TEST OPERATION PRECAUTIONS **DANGER**

- Before performing the test operations of the user creation monitor screen (such as turning ON or OFF bit device, changing the word device current value, changing the settings or current values of the timer or counter), read through the manual carefully and make yourself familiar with the operation method. During test operation, never change the data of the devices which are used to perform significant operation for the system. False output or malfunction can cause an accident.

STARTUP/MAINTENANCE PRECAUTIONS **DANGER**

- When power is on, do not touch the terminals. Doing so can cause an electric shock or malfunction.
- Before starting cleaning or terminal screw retightening, always switch off the power externally in all phases. Not switching the power off in all phases can cause a unit failure or malfunction. Undertightening can cause a short circuit or malfunction. Overtightening can cause a short circuit or malfunction due to the damage of the screws or unit.

STARTUP/MAINTENANCE PRECAUTIONS **CAUTION**

- Do not disassemble or modify the unit. Doing so can cause a failure, malfunction, injury or fire.
- Do not touch the conductive and electronic parts of the unit directly. Doing so can cause a unit malfunction or failure.
- The cables connected to the unit must be run in ducts or clamped. Not doing so can cause the unit or cable to be damaged due to the dangling, motion or accidental pulling of the cables or can cause a malfunction due to a cable connection fault.
- When unplugging the cable connected to the unit, do not hold and pull the cable portion. Doing so can cause the unit or cable to be damaged or can cause a malfunction due to a cable connection fault.
- Before touching the unit, always touch grounded metal, etc. to discharge static electricity from human body, etc. Not doing so can cause the unit to fail malfunction.

DISPOSAL PRECAUTIONS **CAUTION**

- When disposing of the product, handle it as industrial waste.

TRANSPORTATION PRECAUTIONS **CAUTION**

- Make sure to transport the GOT main unit and/or relevant unit(s) in the manner they will not be exposed to the impact exceeding the impact resistance described in the general specifications of this manual, as they are precision devices. Failure to do so may cause the unit to fail. Check if the unit operates correctly after transportation.

Compliance with EC directive (CE Marking)
This note does not guarantee that an entire mechanical module produced in accordance with the contents of this note will comply with the following standards. Compliance to EMC directive for the entire mechanical module should be checked by the user / manufacturer. For more details please contact the local Mitsubishi Electric sales site.

Requirement for Compliance with EMC directive
The following products have shown compliance through direct testing (to the identified standards) and design analysis (forming a technical construction file) to the European Directive for Electromagnetic Compatibility (89/336/EEC) when used as directed by the appropriate documentation.
Type :Programmable Controller (Open Type Equipment)

Standard	EMC	Remark
EN61131-2 : 2003	EMI (Radiated Emissions)	Compliance with all relevant aspects of the standard.
Programmable controllers- Equipment, requirement and tests	EMS (ESD, RF electromagnetic field, EFTB, Surge, RF conducted disturbances and Power frequency magnetic field)	Compliance with all relevant aspects of the standard.

For more details please contact the local Mitsubishi Electric sales site.

Notes for compliance to EMC regulation

1) General notes on the use of communication cables
Any device which utilizes a data communication function is susceptible to the wider effects of local EMC noise. Therefore, when installing any communication cables care should always be taken with the routing and location of those cables. The GOT units identified on the previous chapter are compliant with the EMC requirement when the following communication cables are used.

GOT Unit	Existing Cables
GT1020-LBD, GT1020-LBL	GT10-C30R4-8P (For Melsec FX series PLC)
GT1020-LBD2	GT10-C30R2-6P (For Melsec Q series PLC)

2) General notes on the use of the power cable
The GT1020-LBD and GT1020-LBD2 unit demand that the cable for the power supply is 10m or less.

Associated Manuals

The following manuals are relevant to this product. When these loose manuals are required, please consult with our local distributor.

Manual name	Contents	Manual Number (Model Code)
GT10 User's Manual (sold separately)*1	Describes the GT10 hardware-relevant content such as part names, external dimensions, mounting, power supply wiring, specifications, and introduction to option devices	JY997D24701 (09R819)
GOT1000 Series Connection Manual 1/3, 2/3, 3/3 (sold separately) *1	Describes system configurations of the connection method applicable to GOT1000 series and cable creation method	SH-080532ENG (1D7M26)
GT Designer2 Version2 Basic Operation/Data Transfer Manual (For GOT1000 Series) (sold separately) *1	Describes methods of the GT Designer2 installation operation, basic operation for drawing and transmitting data to GOT1000 series	SH-080529ENG (1D7M24)
GT Designer2 Version2 Screen Design Manual (For GOT1000 Series) 1/3, 2/3, 3/3 (sold separately) *1	Describes specifications and settings of the object functions used in GT Designer2	SH-080530ENG SH-080531ENG (1D7M25)

*1 Stored in the GT Works 2/GT Designer2 in PDF format.

For details of a PLC to be connected, refer to the PLC user's manual respectively.

Bundled Items

Product Name	Model Name	Specifications
GOT	GT1020-LBD	3.7" diagonal [160 × 64 dots], STN monochrome LCD (black/white), built-in backlight
	GT1020-LBD2	
	GT1020-LBL	

Bundled item	Quantity	Bundled item	Quantity
PLC Communication Connector	1	Panel Mounting Packing	1
Panel Mounting Bracket (with M4 × 20 screws)	4	GT10 General Description (This manual)	1

1. Specifications

1.1 General Specifications

Item	Specifications																					
	GT1020-LBD	GT1020-LBD2	GT1020-LBL																			
Operating ambient temperature	0 to 50°C																					
Display section	0 to 55°C (When mounted horizontally), 0 to 50°C (When mounted vertically)																					
Other than display section	-20 to 60°C																					
Storage ambient temperature	-20 to 60°C																					
Operating ambient humidity	10 to 90% RH, non-condensing (The wet bulb temperature is 39°C or less.)																					
Storage ambient humidity	10 to 90% RH, non-condensing (The wet bulb temperature is 39°C or less.)																					
Vibration resistance	Conforms to JIS B3502 and IEC61131-2	<table border="1"> <tr> <th></th> <th>Frequency</th> <th>Acceleration</th> <th>Half-amplitude</th> <th>Sweep Count</th> </tr> <tr> <td rowspan="2">Under intermittent vibration</td> <td>5 to 9Hz</td> <td>--</td> <td>3.5mm</td> <td rowspan="4">10 times each in X, Y and Z directions</td> </tr> <tr> <td>9 to 150Hz</td> <td>9.8m/s²</td> <td>--</td> </tr> <tr> <td rowspan="2">Under continuous vibration</td> <td>5 to 9Hz</td> <td>--</td> <td>1.75mm</td> </tr> <tr> <td>9 to 150Hz</td> <td>4.9m/s²</td> <td>--</td> </tr> </table>		Frequency	Acceleration	Half-amplitude	Sweep Count	Under intermittent vibration	5 to 9Hz	--	3.5mm	10 times each in X, Y and Z directions	9 to 150Hz	9.8m/s ²	--	Under continuous vibration	5 to 9Hz	--	1.75mm	9 to 150Hz	4.9m/s ²	--
	Frequency	Acceleration	Half-amplitude	Sweep Count																		
Under intermittent vibration	5 to 9Hz	--	3.5mm	10 times each in X, Y and Z directions																		
	9 to 150Hz	9.8m/s ²	--																			
Under continuous vibration	5 to 9Hz	--	1.75mm																			
	9 to 150Hz	4.9m/s ²	--																			
Shock resistance	Conforms to JIS B3502, IEC 61131-2 (147m/s ² , 11 ms, Sine half-wave pulse, 3 times each in the X, Y, and Z directions.)																					
Operating atmosphere	Must be free of lamp black, corrosive gas, flammable gas, or excessive amount of electroconductive dust particles.																					
Operating altitude*1	2000 m (6562 ft) max.																					
Installation location	Inside control panel																					
Overvoltage category*2	II or less																					
Pollution degree*3	2 or less																					
Cooling method	Self-cooling																					

*1 Do not use or store the GOT under pressure higher than the atmospheric pressure of altitude 0m (0ft.). Failure to observe this instruction may cause a malfunction.
*2 This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within the premises. Category II applies to equipment for which electrical power is supplied from fixed facilities. The surge voltage withstand level for up to the rated voltage of 300 V is 2500 V.
*3 This index indicates the degree to which conductive material is generated in the environment where the equipment is used. In pollution degree 2, only non-conductive pollution occurs but temporary conductivity may be produced due to condensation.

1.2 Performance Specifications

Item	Specifications		
	GT1020-LBD	GT1020-LBD2	GT1020-LBL
Type	STN monochrome (white/black) liquid crystal		
Screen size	3.7"		
Resolution	160 × 64 dots (Horizontal format)		
Display size	W86.4(3.4) × H34.5(1.35) [mm](inch) (Horizontal format)		
Display character	16-dot standard font: 20 characters × 4 lines (Horizontal format)		
Display color	Monochrome (white/black)		
Display angle	Left/Right: 30 degrees, Top: 20 degrees, Bottom: 30 degrees (Horizontal format)		
Contrast adjustment	16-level adjustment		
Intensity of LCD only	200 [cd/m ²] (in green)		
Life*2	Approx. 50,000h. Guaranteed: 1 year (Time for display intensity to become 1/5 at operating ambient temperature of 25°C)		
Backlight	LED with 3 available colors (green, red, orange) (no replacement required) Backlight status (colors, ON/BLINK/OFF) control. Adjustable screensaver activation time Setting the system information enables*3 PLC to control the backlight status.		
Number of touch keys	Maximum 50 keys/screen (Analog resistive film touch panel)		
Key size	Minimum 2 × 2 dots (per key)		
Simultaneous pressing of two (or more) areas (2-point press)	Not supported (Simultaneous pressing of two or more areas on the screen may activate the switch between those areas.)		
Life	1 million times or more (operating force 0.98N max.)		
User memory*4	Flash memory ROM (Internal), for storing Project data (512kbytes or less), OS, Alarm history and Recipe data		
Life (Number of write times)	100,000 times		
Buzzer output (a buzzer that sounds when touch keys are pressed)	Single tone (LONG/ SHORT/ OFF adjustable)		
Environmental protective structure*5	Equivalent to IP67 (JEM1030) (front section)		
External dimensions	W113(4.44) × H74(2.91) × D27(1.06)[mm](inch) (Horizontal format)		

Item	Specifications		
	GT1020-LBD	GT1020-LBD2	GT1020-LBL
Panel cutting dimensions	W105 (4.13) (+1, -0) × H66 (2.59) (+1, -0) [mm] (inch) (Horizontal format)		
Weight	0.2kg (Excluding mounting fixtures)		about 0.18kg (Excluding mounting fixtures)
Built-in interface	PLC communication	Conforming to serial RS-422 standard, 1ch Transmission speed: 115,200/57,600/38,400/19,200/9,600/4,800bps Connector shape : Connector terminal block 9-pins Application : PLC communication	Conforming to serial RS-232 standard, 1ch Transmission speed: 115,200/57,600/38,400/19,200/9,600/4,800bps Connector shape : Connector terminal block 9-pins Application : PLC communication
	PC communication	Conforming to serial RS-232 standard, 1ch Transmission speed : 115,200/57,600/38,400/19,200/9,600/4,800bps Connector shape : MINI DIN 6-pins (Female) Application : PC communication (Project data upload/download, OS installation, Transparent function)	
Compatible software package	GT Designer2 Version2.43V or later		

*1 Bright dots (always lit) and dark dots (unlit) may appear on a liquid crystal display panel. It is impossible to completely avoid this symptom, as the liquid crystal display comprises of a great number of display elements. Flickers may be observed depending on the display color. Please note that these dots appear due to its characteristic and are not caused by product defect.
*2 The GOT screen saving function prevents images from becoming permanently etched on the display screen.
*3 For the details of system information, refer to the following.
[] GT Designer2 Version□ Screen Designer Manual
*4 ROM in which new data can be written without deleting the written data.
*5 Note that this does not guarantee all users' operation environment.

1.3 Power Supply Specifications

(For details on power supply wiring, such as the allowable cable size and tightening torque, refer to the additional manual, "GT10 User's Manual".)

Item	Specifications		
	GT1020-LBD	GT1020-LBD2	GT1020-LBL
Input power supply voltage	24VDC (+10% -15%), ripple voltage 200mV or less		5VDC (±5%), supplied from the PLC
Fuse (built-in, not exchangeable)	0.4A		--
Power consumption	1.9W (80mA/24VDC) or less		1.1W (220mA/5VDC) or less
At backlight off	1.2W (50mA/24VDC) or less		0.6W (120mA/5VDC) or less
Inrush current	13A or less (26.4VDC) 1ms		--
Permissible instantaneous power failure time*1	Within 5ms		--
Noise immunity	Noise voltage: 1000Vp-p, Noise width: 1μs (by noise simulator of 30 to 100Hz noise frequency)		
Dielectric withstand voltage	500VAC for 1 minute (between the GOT's power supply terminals and the GOT's grounding terminal)		--
Insulation resistance	10MΩ or larger by insulation resistance tester (between the GOT's power supply terminals and the GOT's grounding terminal)		--
Grounding	Class D grounding (100Ω or less). To be connected to the panel when grounding is not possible		

*1 The GOT continues to operate even upon 5ms or shorter instantaneous power failure. The GOT stops operating if there is extended power failure or voltage drop, while it automatically resumes operation as soon as the power is restored.

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

Warranty
Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.
- This product has been manufactured under strict quality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.